

Acel part number AC0533

Voltage & Continuity Tester

0V - 690V Indication AC/DC

Will not Trip RCDs when Connected Live to Earth

Loud Continuity Buzzer

2 Pole Phase Rotation Test

Built in Proving Check to Comply with HSE GS38, 12b

Conforms Fully to BS EN 61243-3:2014

Conforms with HSE GS38

LCD and LED Indication

Polarity Test

Single Pole Live Side Test

Torch Light

IP64


Low Battery Warning

Comes with Padded Case & Belt Loop

2x AAA Batteries Supplied

CATIII 1000V, CATIV 600V

Auto Power Off

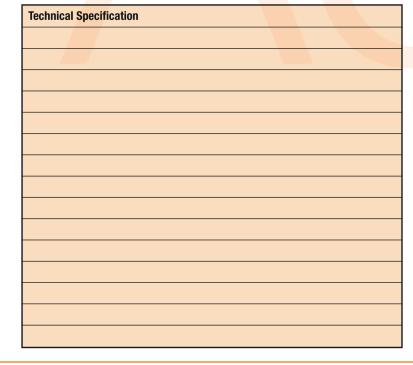

Section-AC CODE-YEAR-VERSION to go here e.g. 10-AC0123-2021-V1

